


Point 8-P Touring [962-0009] Installation [962-0008]

# PRODUCT INFORMATION BOOKLET Document Reference: P8-P\_PIB\_EN\_1.2

Distribution Date: October 30th, 2014

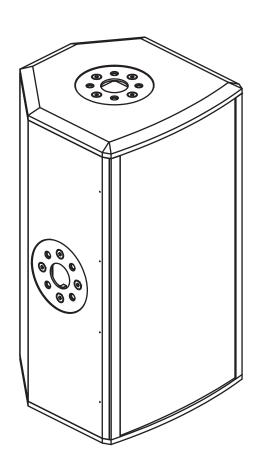

© 2014 Adamson Systems Engineering. All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means without the express written consent of the publisher

#### General Information

Congratulations on your purchase of the Adamson Systems Engineering Point 8-P point source enclosure. Included in your shipment should be: 1x Point 8-P enclosure

All products manufactured by Adamson Systems Engineering are inspected before packaging and shipping and should arrive free from technical and visual defects. After opening the shipping container, check for any damage. If found, please notify your Adamson representative immediately. The consignee should then initiate a damage claim with the shipping agent. Be sure to save all contents and packing materials to be inspected by the carrier.

Read this document thoroughly and completely to become familiar with the product. Also read the product manual containing vital information regarding proper use and safety limits of this product. All accompanying documentation can also be obtained by contacting your Adamson representative, or through the website at <a href="http://www.adamsonsystems.com/">http://www.adamsonsystems.com/</a>.

We are always improving our products and technology, and as such, Adamson Systems Engineering reserves the right to change the contents of its documents without prior notice. Please refer to Adamson Systems Engineering's website for up to date documentation.

### Symbols



**Important Operating Instructions** - Notification of instructions that must be strictly followed to ensure proper use of the product.



**Warning** - Indication of a potential risk of harm to an individual or possibility of damage to the product.

### Safety Instructions

- 1. Read this document completely.
- 2. Follow all safety instructions and heed all warnings indicated by the appropriate signal.
- 3. This product is not to be modified.
- 4. This product is only to be used in conjunction with equipment or accessories authorized by Adamson Systems Engineering. Using unauthorized items is prohibited as this allows risk of hazardous accidents and/or personal injury.
- 5. Read the accompanying user manual before using the product. Follow all instructions regarding use of approved accessories.
- 6. Before suspending this product, read the accompanying user manual's rigging section.
- 7. Do not expose this product to extreme environmental conditions, such as excessive heat, moisture or rain for prolonged periods of time.
- 8. Do not store or transport this product on an unstable surface.
- 9. When transporting this product, please carry by using the handles, or use the approved transportation accessories.
- 10. Maintain all documentation shipped with the product. Record any service to the product in the maintenance section, and if re-selling the product, include these documents in the transaction.
- 11. The maintenance section of this document is to be followed exactly.

### Proper Use



Please read the Point Series User Manual for proper use of this loudspeaker product.

#### Rigging



Please read the rigging section of the Point Series User Manual for proper rigging techniques and safety limits. Use Blueprint AV™ to determine proper rigging information.

## Point 8-P




The Point 8 is the smallest member of the Point Series family, yet it packs a lot of punch for its size. It will be right at home with speech systems or moderate level playback systems, but is still powerful enough to take on jazz bands and other lighter live music.

The Point 8 is available in passive and active(Bi-amped) versions. At its heart lies a single Adamson 8" ND8-LM 16  $\Omega$  Kevlar Neodymium Driver, and 1" Exit HF driver mounted on an Adamson fiberglass waveguide. The point 8's rotatable 90° x 60° waveguide offers a defined coverage pattern, and its hexagonal shape allows use as a monitor without any additional adjustments.

### Specifications

F	CELL 00111
Frequency Range (+/- 3dB)	65 Hz - 20 kHz
Nominal Directivity (-6dB) H x V	90° x 60° Rotatable
Maximum Peak SPL (Active / Passive)**	131.6 dB / 130.6 dB
Components LF	ND8-LM 8" Kevlar Neodymium Driver
Components HF	B&C DE500 1.7" Diaphragm / 1" Exit Compression Driver
Nominal Impedance LF	16 Ω
Nominal Impedance HF	16 Ω
Nominal Impedance Passive	8 Ω
Power Handling (AES / Peak) LF	250 / 1000 W
Power Handling (AES / Peak) HF	50 / 200 W
Power Handling (AES / Peak) Passive	300 / 1200 W
Rigging	4x SLR™ Socket, Omni Mount 30 Series, Built-in Polemount Socket
Connection	2x Speakon™ NL4 (Barrier Strip Optional)
Height Front (mm/in)	451 / 17.75
Width (mm/in)	251 / 9.88
Depth (mm/in)	251 / 9.88
Weight (kg / lbs)	10.7 / 23.6 Active, 12.5 / 27.6 Passive
Processing	Lake, XTA

<sup>\*\*12</sup> dB crest factor pink noise at 1 m, free field, using specified processing and amplification

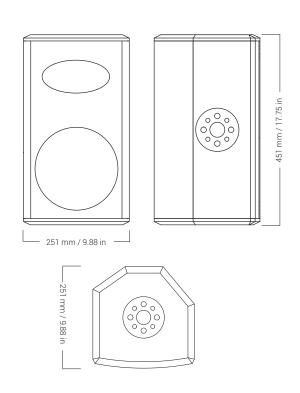

### EC Declaration of Conformity

#### ADAMSON SYSTEMS ENGINEERING, INC.

1401 Scugog Line 6, Port Perry (ON), L9L 1B2, Canada

Declares that the products:

962-0009 Point 8-P (Touring) and 962-0008 Point 8-P (Installation)

Are in conformance with all applicable essential requirements of the Directives:

2006/42/EC: Machinery Directive (relevant to the rigging system of the loudspeaker)

2006/95/EC: Low Voltage Directive

They have been designed to comply with the relevant sections of the following standards and technical specifications:

#### Harmonised Standards

EN ISO 12100 (11/2010) Safety of Machinery

EN 60065 (10/2011): Audio, Video and Similar Electronic

Apparatus – Safety Requirements

#### Further Standards and Regulations

DIN EN 1993-1 Eurocode 3 (12/2010), Design of Steel Structures

DIN 18800 (11/1990), Steel Structures

BGV C1 (04/1998), German Accident-Prevention Regulation for Staging and Production

Facilties for the Entertainment Industry

The Technical File is maintained at:

#### ADAMSON EUROPE GMBH

Billstr. 173, 20539 Hamburg, Germany Contact person and authorized representative: Jochen Sommer (Director of European Operations)

Established at Port Perry, ON. CA - October 30th, 2014

Brock Adamson (President & CEO)



	Maintenance		
--	-------------	--	--

Adamson Systems Engineering products should be regularly inspected to ensure proper performance and safety. Please refer to the Point Series User Manual for detailed instructions.



#### Only perform repair work using the P8 Service Kit [945-0015]

Any other repair work is not authorized and will void the warranty. Please contact an Adamson representative for further information.

MAINTENANCE RECORD	Serial Number: #	
Date	Service Record	Technician

Maintenance	
-------------	--

MAINTENANCE RECORD	Serial Number: #	
Date	Service Record	Technician



#### Point 8-P